


Creating a reveal around the door area of a Bonded glass and screen porch enclosure

Exterior

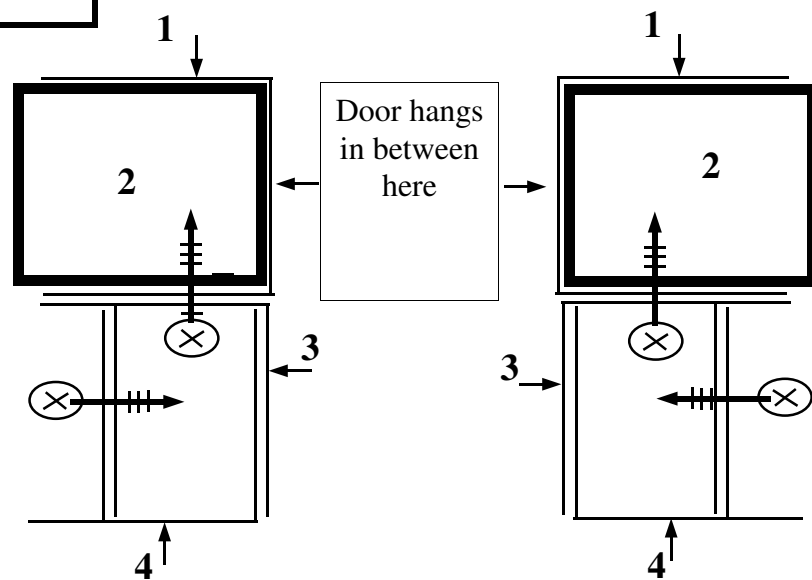

Interior

1. Existing U-Channel installed on enclosure vertical rail.
 2. Enclosure vertical rail
 3. F-Channel cut to the full height of the vertical
 4. F-Channel cut to the full height of the vertical
- A.. Remove any screw attaching #1 onto #2
 - B. Install #3 against the inside face of the vertical rail, insuring the open legs of the F are away from the door opening. Screw through the base of the F channel into the vertical rail.
 - C. Install #4 inside #3 so as to create a box and insuring the open legs of the F are away from the door opening. Screw through the side away from the door into the side of #3.
 - D. If desired, repeat the steps above to attach #3 and #4 horizontally across the top of the door area.
 - E. Install the door and Z-Bars normally, using the reveal just created to a. stiffen up the opening: b, create locations for the striker, closer and chain brackets.